

# VHF BAND BASE STATION ANTENNA MODEL : BS-150

#### **Specifications**

GAIN VSWR FREQUENCY RANGE POLARIZATION IMPEDANCE CONFIGURATION POWER CAPACITY CONNECTOR 6 dB better than quarter wave antennas Less than 1.5:1 136 – 174 MHz Vertical 50 Ohm GROUNDED 5/8  $\lambda$  OVER 5/8  $\lambda$ 200 Watts SO-239


#### Assembly

- 1. Refer to drawing (rear side of this instruction).
- 2. Put the locking nut and washer onto the ground plane radials, then screw the three radials(part #7) into threaded holes on the metal antenna base(part #6) and tighten them by fingers. Secure the radials by tightening locking nuts with wrench.
- 3. Secure supporting pipe (part #11) to mounting pole (not included) in desired location using brackets (part #13), U-bolts (part #12), locking screws (part #8), locking washers (part #9),and locking nuts(part #10) supplied. Tighten them securely with a wrench or screw driver.
- 4. Run up the cable from radio through supporting pipe (part #11) and screw PL-259 on cable end tightly onto SO-239 connector at the bottom of antenna. Assemble antenna into support pipe with open threaded hole turned so that it will align with hole on support pipe for locking screw. Screw the locking screw into hole and tighten it securely with wrench or screw driver.

#### Adjustment

Loosen the screws of clamper(part #2 & 5) on each element( upper radiator and lower radiator) and slide the radiator to the length of desired frequency shown in the tunning chart (rear side). Tighten the clamper securely.

MADE IN TAIWAN

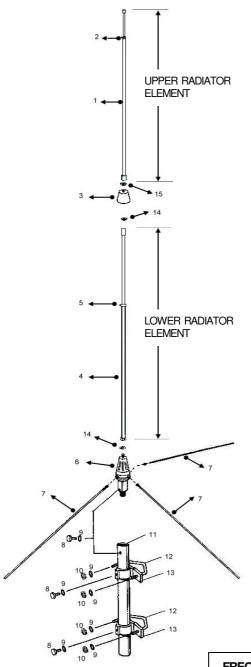

### PARTS LIST

PART #	DESCRIPTION	QTY
1.	UPPER RADIATOR ELEMENT	1
2.	UPPER CLAMPER	1
3.	PHASING COIL	1
4.	LOWER RADIATOR ELEMENT	1
5.	LOWER CLAMPER	1
6.	MATCHING COIL	1
7.	RADIAL ELEMENTS(NUTS & WAS	3
	HERS INCLUDED)	
8.	LOCKING SCREWS	3
9.	LOCKING WASHERS	7
10.	NUTS	4
11.	SUPPORTING PIPE	1
12.	U-BOLT	2
13.	BRACKET	2
14.	SPRING WASHER	2
15.	SPRING WASHER	1

## **TUNNING CHART**

FREQUENCY	UPPER ELEMENT LENGTH		LOWER ELEMENT LENGTH	
135-139 MHz	1400 mm	55-1/8 "	1510 mm	59-1/2 "
140-144 MHz	1365 mm	53-3/4 "	1425 mm	56-1/8 "
145-148 MHz	1330 mm	52-3/8 "	1360 mm	53-1/2 "
149-153 MHz	1305 mm	51-3/8 "	1295 mm	51"
154-158 MHz	1285 mm	50-9/16 "	1245 mm	49"
158-162 MHz	1255 mm	49-1/2 "	1200 mm	47-1/4 "
162-166 MHz	1220 mm	48"	1150 mm	45-1/4 "
167-170 MHz	1195 mm	47-1/16 "	1105 mm	43-1/2 "
171-174 MHz	1150 mm	45-7/8 "	1055 mm	41-1/2 "